

Basic contacts interface

3477

Description

This device lets you integrate traditional control devices (switches, pushbuttons, etc.) in advanced systems with BUS operating logic.

Therefore, it is possible to extend the use of the BUS system in rooms where traditional systems are already present or in historic and prestigious rooms whereby the complete or partial remaking of the electric system would entail heavy masonry work. The old but valuable switch with its no longer compliant wiring can therefore continue to be used with it, as the connection to the load to be controlled is carried out safely by connecting it with its respective interface with no-voltage contact.

Contact PL1 controls light point PL1, contact PL2 controls light point PL2. The interface has a LED for signalling it is working properly and three cables for connecting to traditional devices. This device is made in a Basic enclosure and therefore features a compact size and can be used in flush-mounted boxes, junction boxes, shutter boxes and ducts. Particularly advantageous is the installation inside junction boxes, positioning the item at the back of the flush-mounted box, behind lowered automation devices or behind conventional devices (pushbuttons, switches, etc.).

Technical data

Power supply via SCS BUS:	27 Vdc
Operating power supply with SCS BUS:	18 – 27 Vdc
Current draw:	3.5 mA

Dimensions

Size: basic module

Configuration

If the device is installed in a My Home system it can be configured in two ways:


- PHYSICAL CONFIGURATION, inserting the configurators in position.
- Configuration via MYHOME_Suite software package, downloadable from www.homesystems-legrandgroup.com; this mode has the advantage of offering many more options than the physical configuration.

For a list of the procedures and their meanings, please refer to the instructions in this sheet and to the "Function Descriptions" help section in the MYHOME_Suite software package.

When used as a component of the Lighting Management system, use the specific types of configuration (Plug&go, Project&Download).

The interface consists of two independent control units, which are identified with the positions PL1 and PL2 in the physical configuration and the term Module 1 and Module 2 in the MYHOME_Suite virtual configuration. The two units can send:

- commands to two actuators for two independent loads (On, Off or adjustment) identified with the address PL1 and PL2 and the mode specified in M or;
- a command to the F420 scenario module;
- a double command intended for a single load (motor for blinds Up-Down, curtains Open-Close) identified with the address PL1=PL2 and specified Configuration mode M. The interface has an LED for indicating proper operation and three terminals for connection to traditional devices such as:
- two N/O (normally open) and N/C (normally closed) traditional switches or buttons;
- a switch.

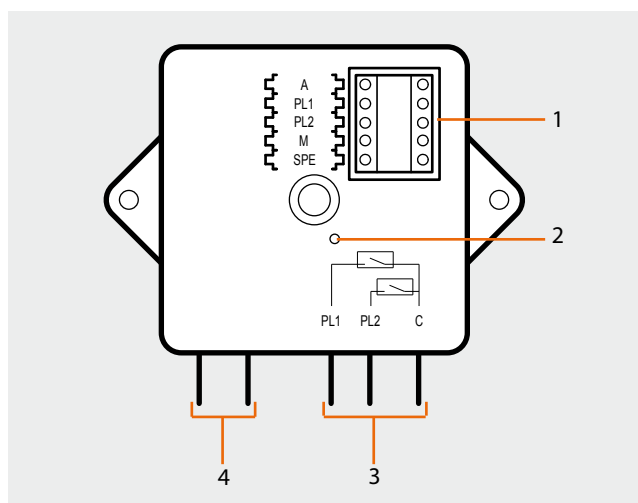

Legend

1. Configurator seat (note that this must only be used in MyHome systems with the physical configuration)
2. LED
3. Cables for connection to traditional devices
4. BUS

List of Functions

The device performs the following functions:

1. LIGHT SWITCH
2. AUTOMATION CONTROL
3. DEVICE LOCKING/UNLOCKING
4. SCENARIO MODULE CONTROL
5. PROGRAMMED SCENARIO ACTIVATION
6. PLUS PROGRAMMED SCENARIO ACTIVATION
7. AUXILIARY CONTROL
8. SOUND SYSTEM CONTROL

See the following pages for the configuration procedures.

Basic contacts interface

3477

Function selection

To configure the contact numbers use MYHOME_Suite virtual configuration

1. Light switch

1.1 Addressing

Address type		Virtual configuration (MYHOME_Suite)	Physical configuration
Point-to-point	Room	0-10	A=1-9
	Lighting point	0-15	PL1, PL2=0-9
Room		0-10	A=AMB
Group		1-255	A=GR
General		General	A=GEN

Installation and destination level:

The special control can also be used in systems where there are SCS/SCS interfaces (F422). or more actuators located on the BUS of another interface (destination level).

By installing the control on the BUS of an interface (installation level), you can control one

Function		Virtual configuration (MYHOME_Suite)	Physical configuration
Destination level	Local bus	1-15	I= 1-9
	Riser bus	riser	I=CEN
	Complete system	entire system	I=0

NOTE: With the virtual configuration, for the room, group and general controls, you can set a light point address for the return of the load status

1.2 Mode

1.2.1 ON/OFF control:

Virtual configuration (MYHOME_Suite)		Physical configuration
Function	Parameter / setting	
Type of contact to terminals PL1 and PL2	Normally open (N/O)	SPE=0
	Normally closed (N/C)	SPE=7
	Cyclic	SPE=0, M=0
	ON	SPE=0, M=ON
	OFF	SPE=0, M=OFF
	Cyclic (N/O contact only)	SPE=1, M=7
	Button	SPE=0, M=PUL
	ON with button at PL2, OFF with button at PL1	SPE=0, M=0/I
Timed ON	0.5sec	SPE=0, M=8
	2sec	SPE=8, M=1
	30sec	SPE=0, M=7
	1min	SPE=0, M=1
	2min	SPE=0, M=2
	3min	SPE=0, M=3
	4min	SPE=0, M=4
	5min	SPE=0, M=5
	10min	SPE=8, M=2
	15min	SPE=0, M=6

For timed ON with period 0-255 hours, 0-59 minutes and 0-59 seconds use MYHOME_Suite virtual configuration

Basic contacts interface

3477

1.2.2 ON/OFF Control and ADJUSTMENT (Point-to-Point only):

Virtual configuration (MYHOME_Suite)	Physical configuration
Parameter / setting	
ON/OFF and cyclic ADJUSTMENT ON/OFF when pressing briefly and adjustment when holding down	SPE=0, M=0
ON with button at PL2, OFF with button at PL1 and DIMMER when held down	SPE=0, M=0/1
ON with adjustment at 10%	SPE=3, M=1
ON with adjustment at 20%	SPE=3, M=2
ON with adjustment at 30%	SPE=3, M=3
ON with adjustment at 40%	SPE=3, M=4
ON with adjustment at 50%	SPE=3, M=5
ON with adjustment at 60%	SPE=3, M=6
ON with adjustment at 70%	SPE=3, M=7
ON with adjustment at 80%	SPE=3, M=8
ON with adjustment at 90%	SPE=3, M=9

For the functions of "Cyclic with custom point-to-point adjustment", "Cyclic with custom adjustment", "Cyclic dimmer without adjustment", "Custom dimmer ON without

adjustment", "Custom dimmer OFF without adjustment", "ON with custom adjustment", "OFF with custom adjustment", use MYHOME_Suite virtual configuration.

1.2.3 Blink command

When an actuator receives a blink command, it implements it by closing and opening the relay for a time equal to T that can be configured as shown in the table.
Combine it with a command configured OFF to switch it off.

Virtual configuration (MYHOME_Suite)	Physical configuration
Parameter / setting	
Blink 0.5 s	SPE=2, M=0
Blink 1 s	SPE=2, M=1
Blink 1.5 s	SPE=2, M=2
Blink 2 s	SPE=2, M=3
Blink 2.5 s	SPE=2, M=4
Blink 3 s	SPE=2, M=5
Blink 3.5 s	SPE=2, M=6
Blink 4 s	SPE=2, M=7
Blink 4.5 s	SPE=2, M=8
Blink 5 s	SPE=2, M=9

For blinking with a period of from 5.5 to 8 seconds, use MYHOME_Suite virtual configuration

Basic contacts interface

3477

2. Automation control

2.1 Addressing

Address type		Virtual configuration (MYHOME_Suite)	Physical configuration
Point-to-point	Room	0-10	A=1-9
	Lighting point	0-15	PL1, PL2=0-9
Room		0-10	A=AMB
Group		1-255	A=GR
General		general	A=GEN

Installation and destination level:

The special control can also be used in systems where there are SCS/SCS interfaces (F422). or more actuators located on the BUS of another interface (destination level).
By installing the control on the BUS of an interface (installation level), you can control one

Function		Virtual configuration (MYHOME_Suite)	Physical configuration
Destination level	Local bus	1-15	I= 1-9
	Riser bus	riser	I=CEN
	Complete system	entire system	I=0

NOTE: With the virtual configuration, for the room, group and general controls, you can set a light point address for the return of the load status

2.2 Mode

Virtual configuration (MYHOME_Suite)		Physical configuration
Function	Parameter / setting	
Type of contact to terminals PL1 and PL2	Normally open (N/O)	SPE=0
	Normally closed (N/C)	SPE=7
Bistable control		PL1=PL2 SPE=0 M=↑↓
Monostable control		PL1=PL2 SPE=0 M=↑↓M

3. Device locking/unlocking

3.1 Addressing

Address type		Virtual configuration (MYHOME_Suite)	Physical configuration
Point-to-point	Room	0-10	A=1-9
	Lighting point	0-15	PL1, PL2=0-9
Room		0-10	A=AMB
Group		1-255	A=GR
General		General	A=GEN

Basic contacts interface

3477

3.2 Mode

Virtual configuration (MYHOME_Suite)		Physical configuration
Function	Parameter / setting	
Type of contact to terminals PL1 and PL2	Normally open (N/O)	SPE=0
	Normally closed (N/C)	SPE=7
	Disable	SPE=1, M=1
	Enable	SPE=1, M=2

To configure the "Installation level" and the "Destination level" and use MYHOME_Suite virtual configuration

4. Scenario module control

4.1 Addressing

Function	Virtual configuration (MYHOME_Suite)	Physical configuration
Room (of the scenario module)	0-10	A=1-9
Light point (of the scenario module)	0-15	PL1, PL2=0-9

NOTE: PL2 must be equal to PL1, or not be configured (in which case the button connected to terminal PL2 is disabled)

4.2 Mode

Virtual configuration (MYHOME_Suite)		Physical configuration
Function	Parameter / setting	
Type of contact to terminals PL1 and PL2	Normally open (N/O)	SPE=0
	Normally closed (N/C)	SPE=7
Scenario modification and activation		
Scenario No.	1-16	SPE=6 ¹⁾ , M=1-8
Scenario activation		
Scenario No.	1-16	SPE=4 ²⁾ , M=1-8

For Delayed activation of the top/bottom button use MYHOME_Suite virtual configuration

NOTE 1): With SPE=6 you can call and program scenarios within module F420. M=1-8: group of scenarios to be controlled (see table).

NOTE 2): With SPE=4 it is only possible to call up the scenario saved in module item F420. M=1-8: group of scenarios to be controlled (see table).

M	First contact PL1	Second contact PL2
1	1	2
2	3	4
3	5	6
4	7	8
5	9	10
6	11	12
7	13	14
8	15	16

A=0-9 and PL1=1-9 are the room and the light point of the scenario module to be controlled. PL2 must be equal to PL1 or not be configured (in which case the second contact is disabled).

Scenario programming

To program, change or delete a scenario you need to enable programming module F420 so that the status LED is green (press the locking/unlocking button on the scenario module for at least 0.5 seconds) and then continue with the following steps:

- 1) press one of the four special control buttons to which the scenario should be associated to for 3 seconds and the corresponding LED will start blinking;
- 2) set the scenario using the corresponding controls for the various Automation, Temperature control, Sound system, etc. functions;
- 3) confirm the scenario by briefly pressing the corresponding button on the special control to exit the programming mode;
- 4) to change a scenario, or to create new ones to use with the other buttons, repeat the procedure starting from point 1. To recall an already set scenario, briefly pressing the corresponding button on the control is enough. If you want to delete a scenario completely, press and hold down the corresponding button for approximately 10 seconds.

Basic contacts interface

3477

5. Programmed scenario activation

Enabling buttons for sending a command to the scenario programmer MH200N.
The address of the assigned command in positions A and PL must be unique and match

the scenario to be activated. The control can be connected at any point in the system (local bus or riser).

5.1 Addressing

		Virtual configuration (MYHOME_Suite)	Physical configuration
Addressing type			
	Room	0-10	A=1-9
	Lighting point	0-15	PL1, PL2=1-9

NOTE: If PL1=PL2 the two buttons connected to the interface activate two different scenarios.
If PL1≠PL2 the two buttons activate the same scenario

5.2 Mode

		Virtual configuration (MYHOME_Suite)	Physical configuration
Type of contact to terminals PL1 and PL2		Normally open (N/O)	SPE=0
		Normally closed (N/C)	SPE=7
Button PL1		0-31	SPE=0 M=CEN
Button PL2		0-31	SPE=0 M=CEN

6. Plus Light Management scenario activation

For the configuration please refer to MY HOME_Suite

7. Plus programmed scenario activation

To configure the address 1 - 2047 of the scenario and the number of buttons 0 - 31 on the control device, use MYHOME_Suite virtual configuration

8. Auxiliary control

For the configuration please refer to MY HOME_Suite

Basic contacts interface

3477

9. Sound system control

This mode allows you to control the amplifiers and the sources of the Sound System.

9.1 Addressing

You can manage a single amplifier (point-to-point control), some amplifiers (room control) and all the amplifiers in the system (general control).

Virtual configuration (MYHOME_Suite)			Physical configuration
Addressing type		Parameter / setting	
Point-to-point	Room	0-9	0-9
	Sound point	0-9	0-9
Room	Room	0-9	A=AMB
			PF=0-9
General		General	A=GEN

9.2 Mode

Virtual configuration (MYHOME_Suite)			Physical configuration
Function		Parameter / setting	
Type of contact to terminals PL1 and PL2		Normally open (N/O)	SPE=0
		Normally closed (N/C)	SPE=7
		ON/volume +	SPE=5, M=0 (for button on PL1)
		OFF/volume -	SPE=5, M=0 (for button on PL2)
		Change track	SPE=5, M=1 (for button on PL1)
		Click on source	SPE=5, M=1 (for button on PL2)

For the "Cyclical ON/OFF" function and to select sources 1-9 use the MYHOME_Suite virtual configuration

Follow Me mode

Enables, upon powering the amplifier, activating the last source switched on.

Virtual configuration (MYHOME_Suite)			Physical configuration
Function		Parameter / setting	
Switch back on from the last source	YES	YES	M=0
	NO	Definition of the source 1-4	M=1-4 ¹⁾

NOTE 1): indicates the sound source to be activated before switching on the amplifier.

Basic contacts interface

3477

For example:

By properly configuring the interface, the following functions are performed:

M=0 ON/OFF mode

Contact on PL1:

Briefly pressing sends out the following sequence:

- ON sources, PL2 indicates the source to be activated before switching on the amplifier.
If PL2=0 source 1 is turned on (follow-me mode)
- ON amplifier A/PL1

On holding down:

- For point-to-point commands if the amplifier is already on, only the volume is adjusted (VOL+); if the amplifier is off, the switch-on sequence is sent first.
- For GEN or AMB commands only the volume is adjusted.

Contact on PL2:

Briefly pressing sends the OFF command for the amplifier A/PL1

Pressing and holding down adjusts the volume (VOL-)

In this operating mode:

Point-to-point command

A=1-9 amplifier room

PL1=0-9 amplifier sound point

Room control

A=AMB

PL1=1-9 room of amplifiers where the command is directed

General control

A=GEN

PL1=0

PL2=1-4 indicates the source to be activated before switching on the amplifier.

If PL2=0 follow-me mode is turned on

M=1 Cycle source/Cycle track mode

Contact N1: cycle source

Contact N2: cycle track

In this operating mode:

Room controls

A=1-9 is the amplifier room

General controls

A=GEN for general controls

PL1=PL2=0

Wiring diagram

