



■ System overview

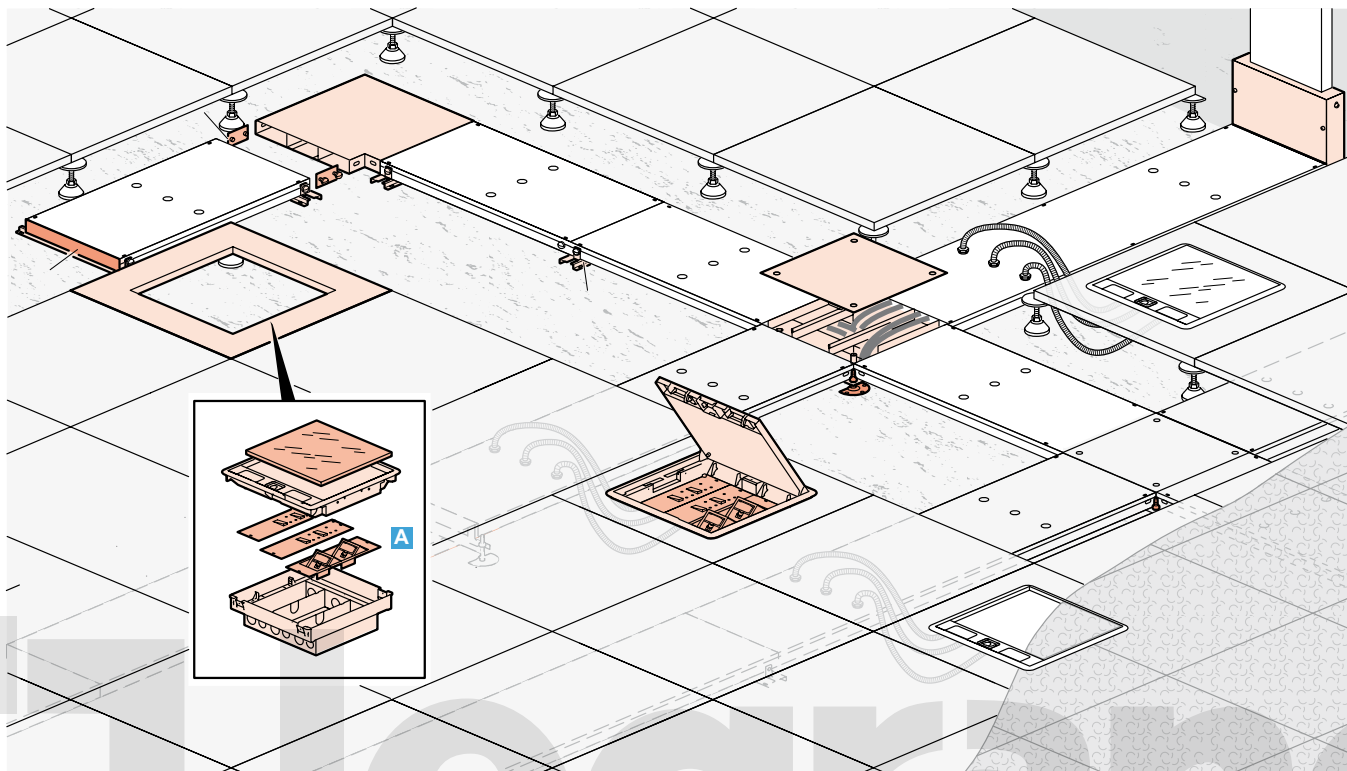


A Floor box (full backbox + lid and trim) Socket outlets and data sockets plates to be ordered separately

Full backbox Cat.No 6896 38 for raised floor

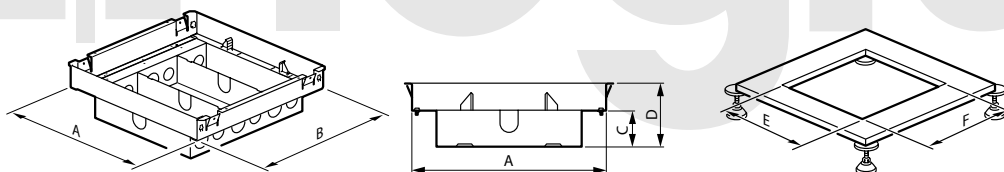


Cat.No	A (mm)	B (mm)	C (mm)	D (mm)	No compartment
6896 38	263	263	48	86	3


■ Installation principle

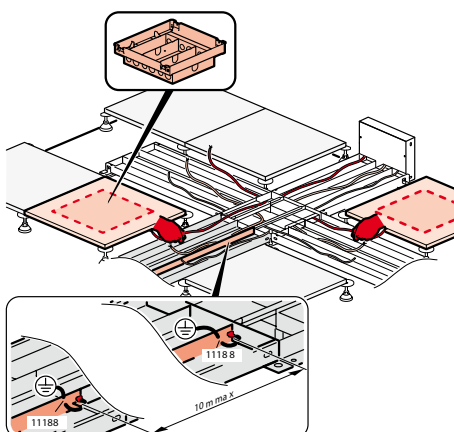

Cut raised access floor tiles according to backbox size and earth the system (minimum every 10 meters)

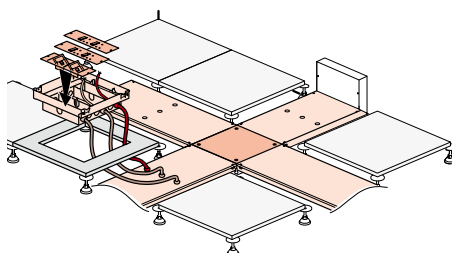

On trunking, remove knockouts to fit flexible conduit. Fix the wiring accessory plates. Earth the system

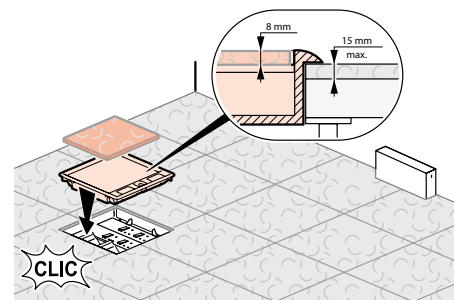

Fit the floor covering (carpet,...) and clip the lid and trim onto the backbox (push and fit principle)